


deli


DY862

4V CORDLESS
ROTARY TOOL KIT

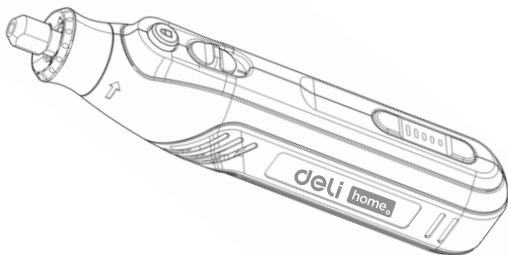

Please read this manual carefully before use
and keep it in a safe place

Component List

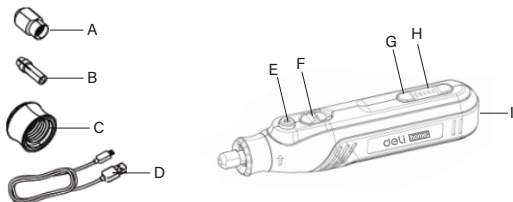

1. Rotary Tool

NO	Component	NO	Component
A	Locking Collar	F	On/Off Switch
B	Collect	G	Speed adjustment button
C	Chuck Housing	H	Speed Indicator/ Electricity indicator
D	Charging cable	I	Charging port
E	Spindle Lock Button		

About charging

Connect the power supply (DC4V), Insert USB into the machine.

Charging complete= H(Electricity indicator) five green lights

charging= H(Electricity indicator) green light flashing

NOTE! A battery pack that has been unused for a while or never been charged must be charged before reuse or first use.

CAUTION! Do not charge a battery for a second time in close succession. There is a danger of overcharging the battery pack.

TOOL TECHNICAL DATA

Rated Voltage: 4V DC

Battery Capacity: 2000mAh Li-ion

Charger Time: 2-3h

5 Setting Speed (with 5 LED speed indicator): 5000-25000rpm

Collect size: \varnothing 3.2mm

Charging cable: USB C

2. Accessories List (101pcs)

NO	Accessory Name	Quantity	Diameter Shanks	Application
1	Sanding paper	40pcs	/	Use to sand wood, metal and jade
2	Cut off wheel	36pcs	/	Use to cut wood, metal, plastic, jade and glass
3	Sanding band	4pcs	/	Use to sand wood, metal, plastic and jade
4	Grinding wheel with shank	4pcs	ø3.2mm	Suitable for grinding metal, glass, wood, plastic, jade and ceramics.
5	Diamond bit	4pcs	ø3.2mm	Use to engrave jade, metal, glass, wood, plastic
6	Felt wheel	2pcs	/	Use to polish jade, glass, wood, plastic and metal.
7	Stainless cutoff wheels	2pcs	/	Use to cut wood, metal, plastic, jade and glass.
8	Hss cutter	2pcs	ø3.2mm	Use to shape and hollow most metals, plastics and woods.
9	Hss drill	1pcs	ø3.2mm	Use to drill soft material such as plastic, wood and fiberglass.
10	Mandrel for cut off wheel	1pcs	ø3.2mm	Used in combination with cutting off wheels.
11	Mandrel for felt wheel	1pcs	ø3.2mm	Used in combination with felt wheels.
12	Steel brush	1pcs	ø3.2mm	Use to rough polishing of metal, jade, wood.
13	Sanding drum kit	1pcs	ø3.2mm	Used in combination with sanding bands.
14	Diamond cut off wheel	1pcs	/	Used to cut wood, metal, plastic, jade, glass.
15	Spanner	1pcs	/	Use to tighten or loosen collect/Screws on top of sanding drum and Mandrel.

OPERATION

1. Speed control

Use the speed adjustment button "+" or "-" to adjust the speed. This tool has five speed settings (see below list). Push the on/off switch forward to turn on the tool. Push backward the on/off switch will turn off the tool. The battery indicator will light up according to the tool speed.

Warning! Do not put the tool down while the motor is still running. And too much load at low speed will burn out the engine.

Speed Setting	Speed Range
5	25000rpm
4	20000rpm
3	15000rpm
2	10000rpm
1	5000rpm



2. Change the collect

The collet is able to stabilize the attachment at high rotation speeds. Press and hold the Spindle Lock Button, use the Wrench to release the Locking Collar until the Locking Collar can be removed, then remove the old collect and replace it with the new collect, finally install the Locking Collar and use the wrench to tighten it.

3. Assemble & Disassemble Accessories

Press and hold the spindle lock button, use the wrench to loosen the Locking Collar, and disassemble the accessory.

Note! Turn the tool off and ensure that the rotating part is stopped before taking next step.

Note! Replace the accessories by inserting them into the collect as far as possible to minimize exhaust and imbalance.

Warning! Do not press the spindle lock button when the motor is running.



4.How to Use mandrels

Mandrels are shanks with a threaded screw head used for , cut-off wheels, sanding bands, and felt wheels. Details see below figures.



sanding drum kit



cut off wheel



felt wheels

Safety instructions

Warning!!!



Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/ or serious injury. Save all warnings and instructions for future reference.



1. Before using the tool, ensure that it is ready and safe to use!
2. Do not use in wet condition and environment.
3. Never use the tool near to flammable gas or liquids.
4. Do not force to operate the device when it slows down or stops turn it of and finish the work process.
5. Wear Personal Protective Equipment while using the tool, such as ear defenders, eye protection, safety gloves and a dust mask.
6. Do not touch the drill/grinding tip during operation (even if it is in low speed). because it can cause injury!
7. Keep this product away from children.
8. Please send the waste batteries to the local battery collection point, do not throw away the batteries together with household garbage
9. This product has been marked with a symbol relating to removing electric and electronic waste. The product should not be discarded with household waste but must be returned to a collection system which conforms to the European Directive 2012/19/EU. It will then be recycled or dismantled in order to reduce the impact on the environment. Electric and electronic equipment can be hazardous for the environment and for human health since they contain hazardous substances.

Cleaning and maintenance

Always pull out the mains power plug before starting any cleaning work.

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible.
- Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap.

Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device.

ENVIRONMENTAL PROTECTION



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

Product Warranty Card

Dear users :

Thank you for buying our products. In order to ensure your profit, users who buy our products can contact local distributor or Specified repair stations with invoice and warranty cards if the product failures due to quality problems.

Warranty Notice:

1. From _____ (Year/Month/Day) to _____ (Year/Month/Day), If the failure happen in normal use, our company will provide free warranty, parts replacement and other services according to the failure situation.
2. This warranty card and purchase invoice are the voucher of after-sales service provided by our company to customers. The card must be detailed only after filling in the following form and affixing the official seal with the distributor.
3. In one of the following cases, free warranty service will be invalid, and maintenance fees will be required:
 - (1) Exceed the expiration date.
 - (2) Failure or damage caused by not following the requirements of the product manual, maintenance or improper storage.
 - (3) Failure or damage caused by disassembling, repairing or modification of the product without the permission of our company.
 - (4) Machine breakdown or damage caused by force majeure.
 - (5) Consumable accessories.

This card is issued with the product. One card for one machine, to ensure that you can fully enjoy the right to free warranty service provided by the company, please keep this card properly, lost will not be replaced.

Purchase Date: _____ (Year/Month/Day)

Product Certificate

Inspector:

01

Date of manufacture:

NINGBO DELI TOOLS CO., LTD.
No. 128 Chezhan West Road, Huangtan Town,
Ninghai County, Ningbo, Zhejiang, China
delitoolsglobal@nbdeli.com
www.delitoolsglobal.com
+86 574 87562689
MADE IN CHINA

